


# AIRREX AIR CONDITIONER

## USER'S MANUAL

HSC-14

- ▶ Thank you for purchasing an AIRREX AIR CONDITIONER. BEFORE operation please read this user's manual carefully.
- ▶ Keep this manual readily available.
- ▶ It is ESSENTIAL that you read the 'NOTES ON SAFETY' carefully before use and follow them at all times.
- ▶ The Air Conditioners are specified for use on a 115V, 60Hz, 1ph for models HSC-14/18/24, and 220V, 60Hz, 1ph for model HSC-24A single phase power supply. You must check that the local electricity supply is the same and have the appropriate plug fitted by a qualified electrician.
- ▶ The Warranty form is on Page 15. Please complete it now and keep in a safe place.
- ▶ We have a policy of continual improving to our products. The contents (features and specifications) in this manual are therefore subject to change without notice.

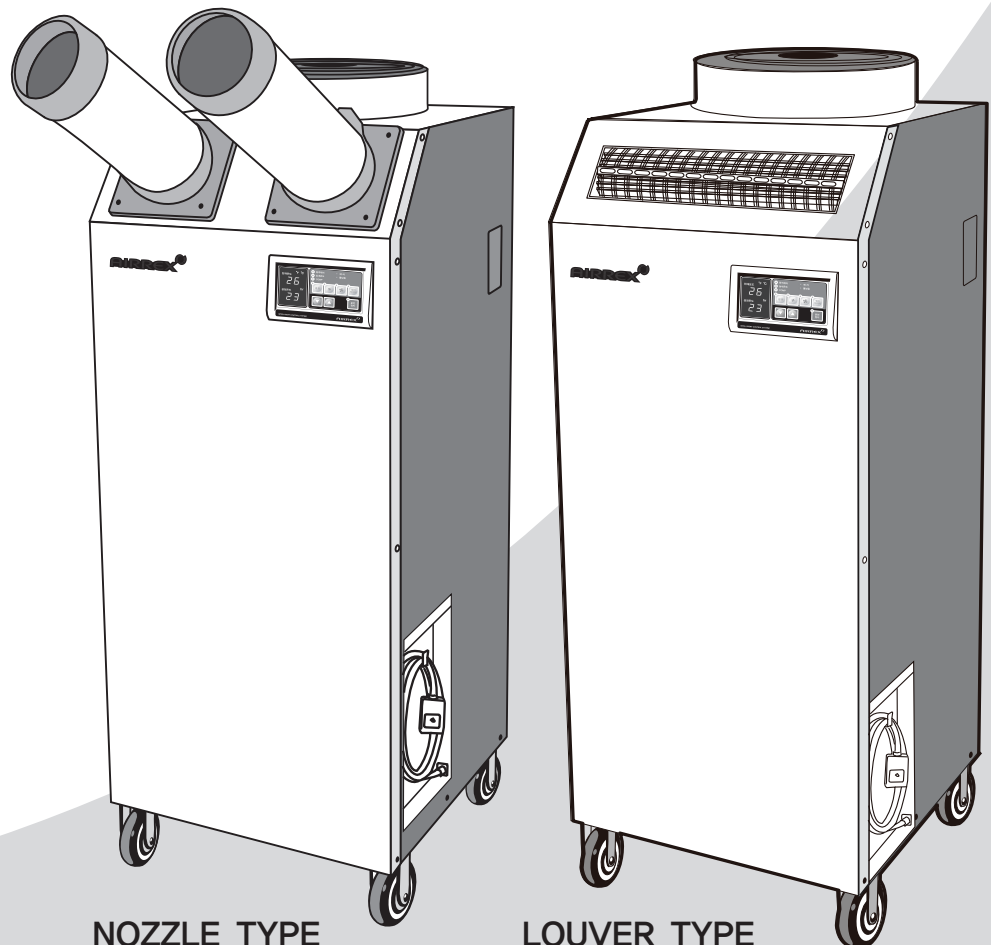

NOZZLE TYPE

LOUVER TYPE



**Intertek**  
3073615

**TABLE OF CONTENTS**

- SAFETY INSTRUCTIONS ..... 3
- DESCRIPTION ..... 5
  - Front View ..... 5
  - Back View ..... 5
  - Control Panel ..... 6
- OPERATING INSTRUCTIONS ..... 7
  - On/Off Operation ..... 7
  - Selection of Area/Room or Spot Cooling ..... 8
  - Economic Mode ..... 8
  - Temperature Control ..... 9
  - Off Timer ..... 10
  - Indicator and Operational Error Alerts ..... 11
- CLEANING AND MAINTENANCE ..... 12
- TROUBLE SHOOTING / ACCESSORIES ..... 13
- SPECIFICATIONS ..... 14
- WARRANTY ..... 15

## SAFETY INSTRUCTIONS

The following instructions are for ensuring the user's safety and to prevent any physical injury or material damage. Please read carefully and follow all instructions. There are two sections to these instructions: WARNING and CAUTION.

The following symbols are for your guidance:

= You must NOT.       = You MUST.

### WARNING

- Use a 115V, 60Hz,(HSC-14/18/24), 220V, 60Hz(HSC-24A) 1 Phase power supply only. (Wrong supply may cause a fire and / or shock hazard)
- Securely plug into an grounded outlet. (Unless earthed, may cause electric shock)
- Do not use a damaged power cable, plug or socket. (Short, fire or shock hazard)
- Do not remove plug by pulling cable or with wet hands. (Risk of fire and electric shock)
- Before cleaning, remove plug from socket. (Otherwise risk of electric shock)
- Do not place anything on top of the machine. (This could cause electric shock, malfunction or injury)
- Do not use an extension cord. (Risk of fire and / or electric shock)
- Ensure mains plug is clean and securely plugged in. (Otherwise it may short causing smoke and fire)
- Do not 'kink' or sharply bend the power cable nor put any weight on it. (The insulation may be damaged causing fire and/ or electric shock)
- Do not turn off by removing power plug. Always turn off at control panel first. (Risk of electric shock and / or malfunction)
- Do not use this cooler on unstable or inclined surfaces. Always use on solid flat floor. (Risk of falling causing injury, fire or malfunction)
- A damaged power supply cable must be replaced with a new power supply cord obtained from the product manufacturer and not repaired.

 Keep this manual in a visible location near the cooler for easy reference.

## SAFETY NOTICE

### CAUTION

- Do not place cooler on uneven, unstable or inclined surface.  
(This could cause malfunction)
- When storing the cooler, ensure that it is kept in a dry, cool place.  
(To prevent corrosion and malfunction)
- If not being used for some time or if lightening is present, always unplug  
from power. (To prevent risk of electric shock, short circuit or fire)
- Do not spray water on to the cooler nor use solvents such as benzene,  
thinner or alcohol for cleaning.  
(There is a risk of electric shock and / or short circuit)
- Designed for indoor usage.

## GENERAL ADVICE BEFORE USE

- Ensure the safety of the location in which cooler is to be used.
- Ensure the floor or ground is smooth and sound.
- Ensure you allow at least 20inch air space all around the cooler.
- When in position LOCK the casters to prevent rolling.
- Never use the cooler at more than 2° incline.

### FOR MAXIMUM EFFICIENCY


- In airtight areas use vertical exhaust into ceiling.
- If possible locate exhaust outlet through a window or door to outside.
- Exhaust ducting should be no longer than 6,6 ft, for maximum efficiency.
- Ensure correct electricity supply.

### DUCT INSTALLATION


- The duct should be established before using.  
(Duct length : minimum 1ft)

## EXTERIOR DESCRIPTION


### FRONT VIEW

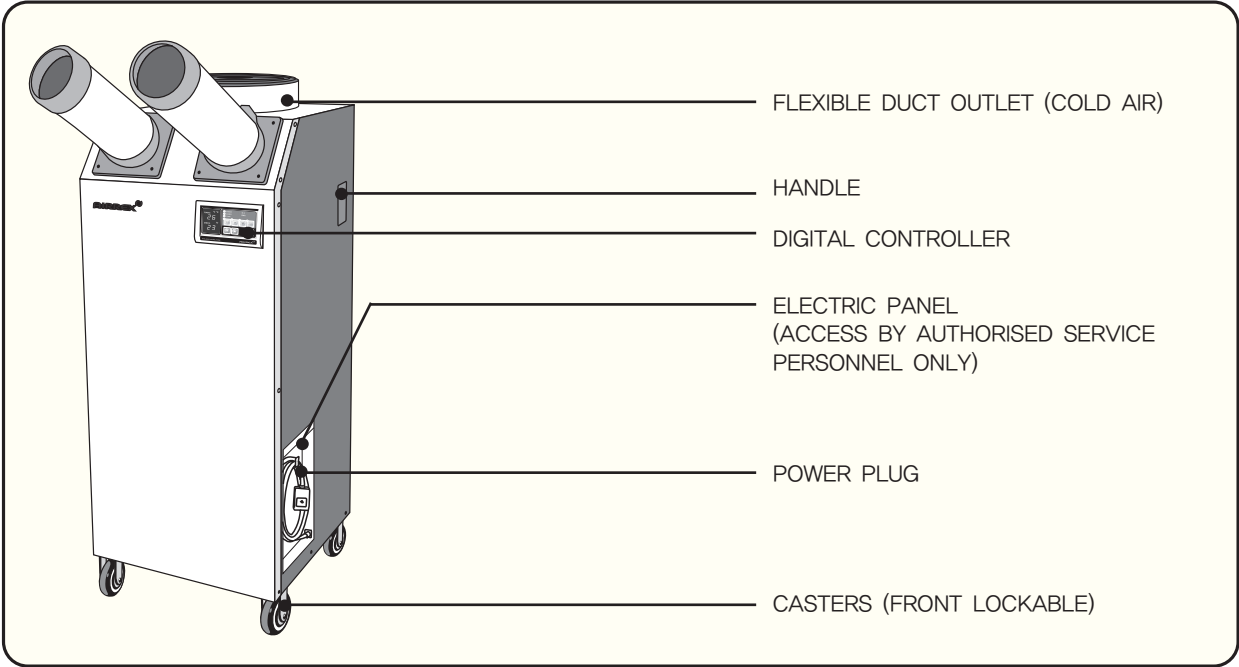

### BACK VIEW

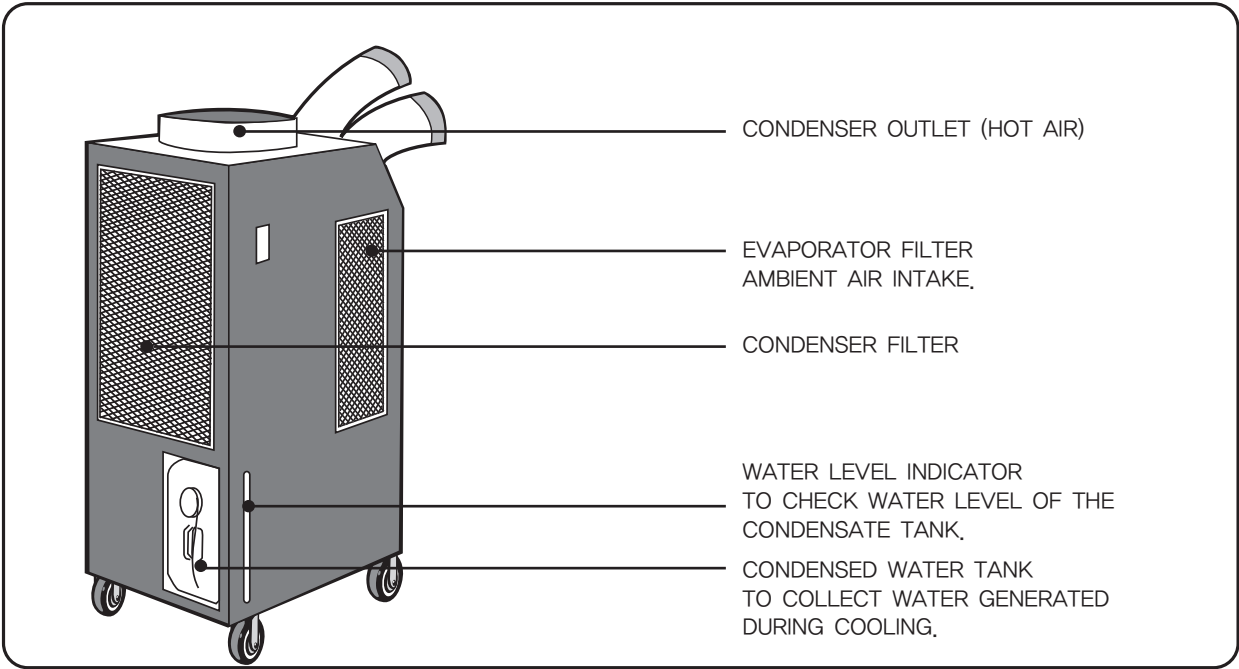


## CONTROL PANEL FUNCTIONS

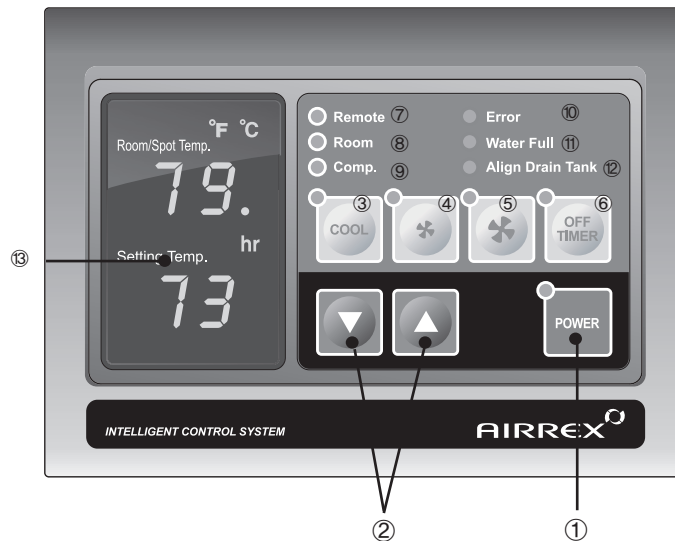

- ① Power : Use to power On / Off.
- ② ▼▲ : Raises or lowers temperature and/ or sleep (off) time.
- ③ Cool : Use to select cooling mode.
- ④ Low Mode : Controls fan low speed.
- ⑤ High Mode : Controls fan high speed.
- ⑥ Off Timer : To set the length of time, once turned on, that you wish the cooler to run for. You can set 0~24 hours. Time intervals are 30mins. up to 10 hours and then 1 hour between 10 and 24 hours.
- ⑦ Remote : From the long distance, you can control the machine by wired remote control.
- ⑧ Room : If the LED is On, the displayed temperature is for Room temp. If the LED is Off, the displayed temperature is for spot temp.
- ⑨ Comp. : When the compressor is operating, the LED is On.
- ⑩ Error : Error signal ( E1 : High Pressure, E2 : Low Pressure, E3 : Sensor, AF: Eva Freezing)
- ⑪ Water Full: Red light indicates 'Tank Full'. The compressor will shut off automatically. Empty tank and replace in position to resume operation.
- ⑫ Align Drain Tank : The red light indicates the water tank is not in the correct position.
- ⑬ Display : Display Room/Spot temperature, the setting temp and sleep time in case of setting them. When the user set the sleep timer, 'hr' will be turned on. (Display of 'LO' : under the 32°F, Display of 'HI' : over the 99°F)

## OPERATION



### RUNNING & STOP

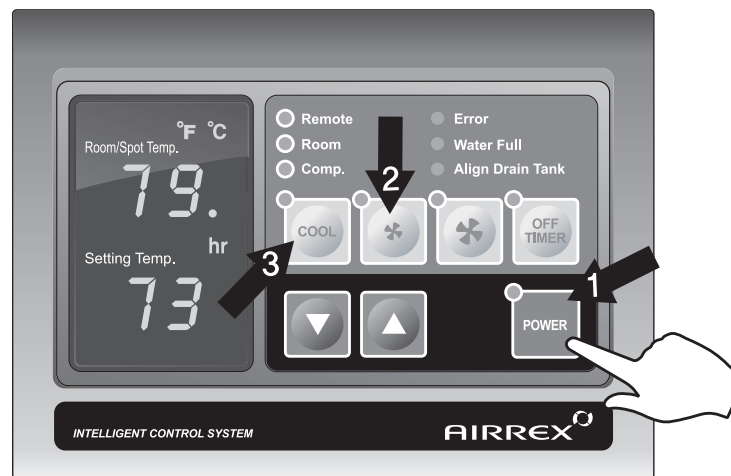

1. START BY PRESSING THE 'POWER' BUTTON.
  - Cooler will start up automatically.
  - To STOP the unit, press the 'POWER' button once again.
2. To change fan speed, press the 'Low' button.
3. If you wish to operate on fan only, press the 'COOL' button. To resume cooling, press the 'COOL' button again.  
(Note : There is a 3 minute delay when switching functions to protect the compressor)

## SELECTION of AREA/ROOM or SPOT COOLING

To reduce the temperature of the entire room select 'Area/Room'.  
 For 'targeted' cooling of machinery, servers, or people etc. select 'Spot Cooling'.

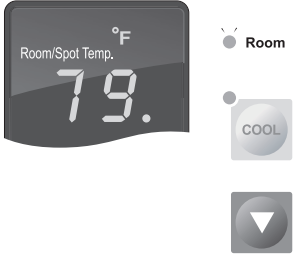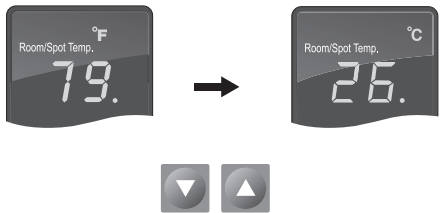
 <p>1. If you want to display room temperature, push cool and ▼ button simultaneously for three seconds.</p>	 <p>2. If you want to change temperature unit °F ↔ °C, push ▼ and ▲ button simultaneously for three seconds.</p>
---	--

## ECONOMIC MODE

If the compressor operation is stop in "Room Temp Mode", the Fan motor operation also is stop in 3min. later.

In Room Temp Mode, If you want to go "Economic Mode", Push Low fan (or High fan) button continuously for 3 seconds.


1.

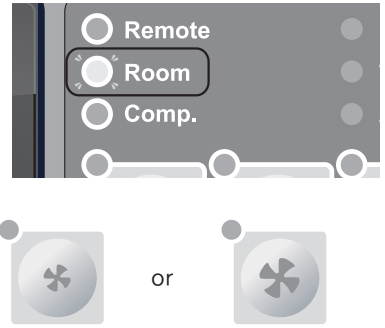

2. If the Economic mode is effective, Room Mode LED is blink.



## TEMPERATURE CONTROL OPERATION

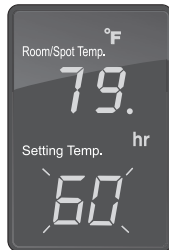

1. When power is ON, the setting temperature is displayed. Default of setting temperature is as below.
  - 50°F in Spot Mode,
  - 60°F in Room Mode,



2. When you push either ▲ or ▼ button, the setting temperature is changed.



3. The display showing the set temperature will blink 3 times.

4. Display range & Setting range.

Mode	Display range	Setting range
Room Temp	32°F~99°F	60°F~86°F
Spot Temp	32°F~99°F	50°F~86°F

Cooling operates when Room/Spot temperature is *more than* set temperature.

Cooling stops when Room/Spot temperature is *less than* set temperature.

## HOW TO SET THE 'OFF' TIMER.

This function enables you to set the length of time you want the cooler to operate. You can set the time period from 30min. to 24 hours in 30min. and 1 hour increments.



1. When cooler is operating, press the 'Off Timer' button and set the length of time you want by pressing ▲ or ▼. Each time you press the button you will increase the 'time to off' period by 30mins, up to 10 hours, and 1 hour thereafter up to 24 hours. The display will show ,5 for 30min and 1 for an hour, e.g. One and a half hours will show 1.5.



2. When you have finished setting the time period, the 'Off Timer' lamp will be on which indicates the cooler is in sleep (Off Timer) mode.

OFF TIMER LAMP IS ON



3. If you press the 'Off Timer' button during its operation, the remaining time will be shown.

AFTER 1hr




1sec

4. To CANCEL timing, press 'Off Timer' button for ONE second. It will then switch the timer off automatically.

## 'ERROR' and WARNING INDICATORS

The machine's safety devices will automatically signal any problems via the display window on the control panel. The information below shows how to read these signals.

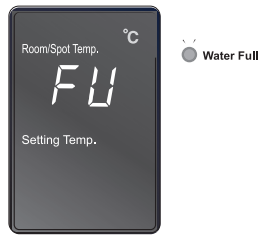

### 1. WATER FULL– Display shows “FU”

When the water container is full, “FU” is displayed and the LED “Water Full” light will be on.



### 2. ALIGN WATER TANK

If the water tank is not positioned correctly, the LED “Align Drain Tank” light will be on.



### 3. HIGH PRESSURE

‘E1’ is displayed and the ‘Error’ LED will be on when the pressure of the compressor is too high and the high pressure switch is open.



### 4. LOW PRESSURE

‘E2’ is displayed and the ‘Error’ LED will be on when the pressure of the compressor is too low.



### 5. SENSOR PROBLEM

If the thermistor is short circuited or cut, ‘E3’ is displayed and the ‘Error’ LED will be on.




### 6. ANTI FREEZING


When the temperature of the evaporator is below 28°F, ‘AF’ is displayed and the ‘Error’ LED will be on.

## CLEANING AND MAINTENANCE

### CLEANING THE AIR FILTERS

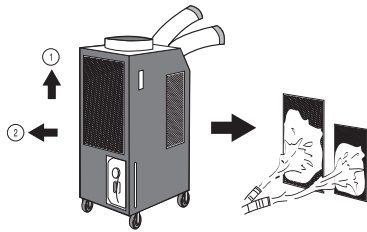


1. To remove filters, slide up a little ① and pull towards you ②.
2. Clean the filters with water or compressed air.

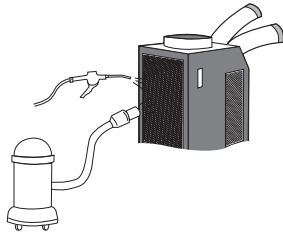


3. Clean evaporator and condenser units with a vacuum cleaner or compressed air.


### MAINTENANCE

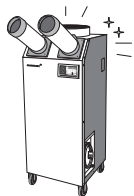

 1. After cleaning, completely dry the inside of the unit by operating on 'Fan Mode' only for 3 to 4 hours.



 2. Turn "OFF" at control panel, remove plug from socket. Coil and store cable neatly.



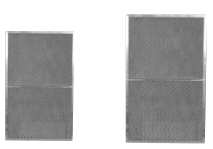


3. Keep machine suitably covered to prevent damage by damp, humidity and dust.

## TROUBLE SHOOTING

TROUBLE	CHECK	REMEDY
NOT WORKING	● Power plug correctly connected	● Connect plug correctly
	● POWER button "OFF"	● Press POWER button to "ON"
	● Blown fuse in electric panel	● Replace fuse
	● Fuse (supply) blown	● Exchange fuse in board
	● Breaker on switch board tripped	● Check load capacity and reset
	● Ambient temp. too high (over 105°F)	● Use only below 105°F
POOR COOLING	● Filter blocked with dust	● Clean Filter
	● Dust in heat exchanger	● Clean heat exchanger
	● Obstacle against inlet side	● Remove and allow 20inch,clearance
	● Ambient temp. too high (over 105°F)	● Use only below 105°F

## ACCESSORIES

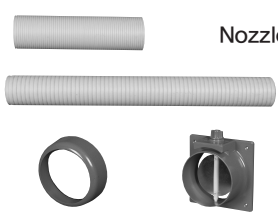ITEM				MODEL	DRAWING
				HSC-14/18/24/24A	
COLD AIR OUTLET	DUCT	Diam. 5inch	12inch	<input checked="" type="checkbox"/>	 Nozzle type
			9,8 ft.	OPTION	
	DUCT COVER (FINISHING COLLAR)			<input checked="" type="checkbox"/>	
	DAMPER BASE (FLOW CONTROL FLAP)			<input checked="" type="checkbox"/>	
ALUMINIUM FILTER CASSETTE			<input checked="" type="checkbox"/>	Nozzle type Louver type	
HOT AIR EXHAUST	ALUMINIUM FILTER CASSETTE			<input checked="" type="checkbox"/>	

## SPECIFICATIONS

		HSC-14
Cooling Capacity	BTU/h kW	13,600 (3,98)
Power Supply		115Vac, 60Hz, 1Ph.
Dimensions (WxDxH)	inch.	19,3 X 23,6 X 46,8
Weight	lb	176
Evaporator Air Flow	ft <sup>3</sup> /m	440
Power Consumption	kW	1,5
Current Consumption	Amp.	13
Nema Plug		5-15
Refrigerant	lb	R-410A, 1,33
Air Filter		Aluminium Mesh Cartridge
Safety Devices		<ul style="list-style-type: none"> <li>▶ High Pressure Switch</li> <li>▶ Low Pressure Switch</li> <li>▶ Auto 'Full Tank' shut off.</li> <li>▶ Thermostat and relief valve for compressor</li> <li>▶ Fan motor protection</li> <li>▶ Tank position indicator.</li> <li>▶ 3 min. delay timer.</li> </ul>
Power Cable	DEVICE	Plug
	Length	9,8 ft.
Operating Range		72°F DB 60% RH ~ 105°F DB 40%
High Pressure	kgf/cm <sup>2</sup> /psig	31/455,7
Low Pressure	kgf/cm <sup>2</sup> /psig	13/191,1
Max. Duct Length (Either hot or cold, not both together in use)	Cold Duct	30 ft. (Nozzle Type Only)
	Hot Duct	32,8 ft.
Fuse in power box in Machine body		250Va.c. 10amp.

## WARRANTY

(Applicable to first retail purchaser only)

AIRREX AIR CONDITIONERS give more reliable performance, comfort and durability the more they are used. They are built under a strict quality assurance regime which includes inspection both during and after production and exhaustive reliability testing.

In the unlikely event you have any problems, please contact your dealer or distributor. If the problem is as a result of a production fault or failure, repairs will be undertaken free of charge during the period of warranty subject to the following warranty conditions:

1. The warranty period is 12 months from the date of first purchase.
2. If the problem has been caused by customer error or misuse, abuse or damage, then all repairs will be charged for.
3. This warranty applies to your country.
4. Proof and date of purchase must be supplied.
5. Please complete the details below and keep this warranty in a safe place.
6. All transport charges back to the dealer are at the customers cost. Keep all original packaging to facilitate return. Return to customer will be at dealers cost (if genuine warranty claim).

DESCRIPTION	AIRREX AIR CONDITIONER		
MODEL	HSC-14		
DATE OF PURCHASE		PRODUCT SERIAL NO:	

Warranty Period	(    ) Months		
DISTRIBUTOR	Name of Company		
	Telephone No.		

CUSTOMER DETAILS	Name :		
	Address :		
	Telephone :		

# AIRREX<sup>®</sup>

USA DISTRIBUTOR  
AIRREX USA  
P.O BOX 340  
HEWITT, TEXAS 76643  
TEL : 1-888-244-5898  
FAX : 1-469-574-7924  
sales@airrexusa.com

HEPHZIBAH CO.,LTD.  
1385-15 JUAN-DONG, NAM-GU  
INCHEON, KOREA  
TEL : +82-32-509-5834  
FAX : +82-32-502-5519  
E-mail : airrex@hdtek.com  
Website : www.airrex.co.kr

● Designs and specifications of products are subject to change without prior notice for the improvement of products.