




Click Here To View
Item at

www.GapPower.com

*Sales • Rentals
Parts & Service*

CONTROLLED ENVIRONMENT SYSTEMS

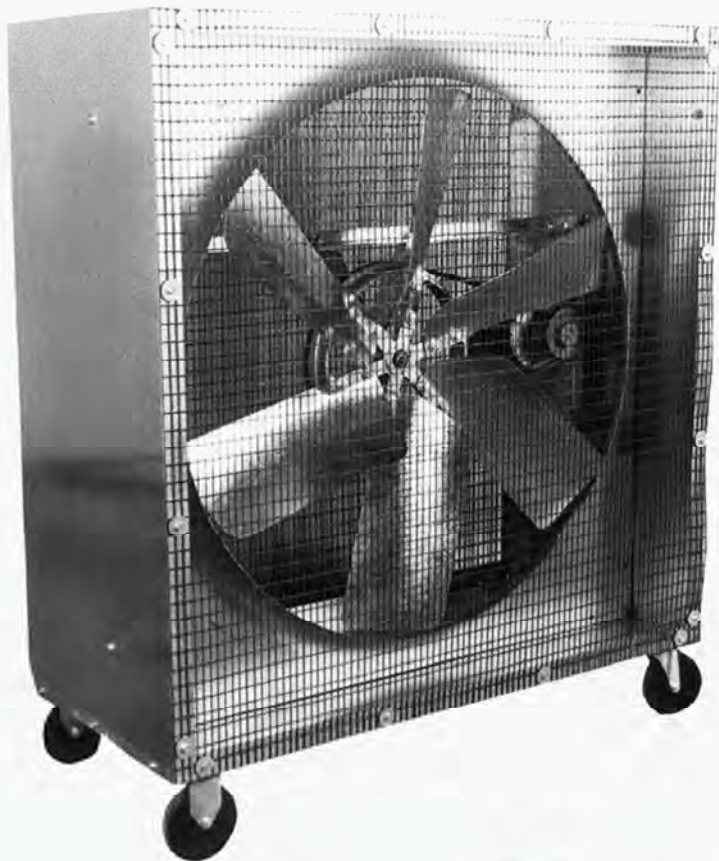


COOLAIR **MOBILE AIR CIRCULATOR**

**FOR AIR MOVEMENT
WHEREVER YOU NEED IT!**



FARM PRODUCTS DIVISION

American Coolair Corporation
Phone (904) 389-3646
Box 2300, Jacksonville, Florida 32203
Fax 904-387-3449 E-mail: fans@coolair.com

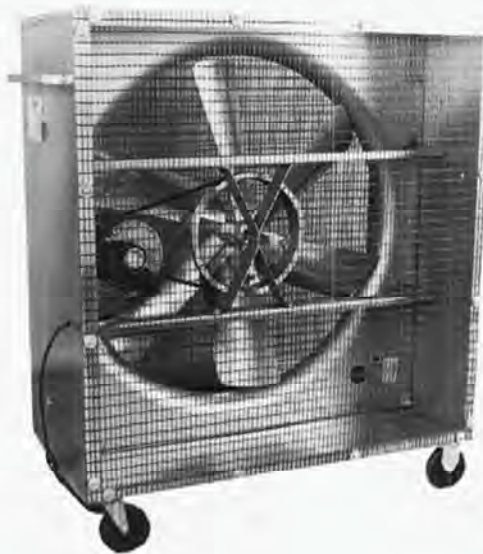

TYPE MCF 36J FAN MOBILE AIR CIRCULATOR

HIGH VOLUME, HEAVY DUTY MOBILE AIR CIRCULATOR FOR COOLING FACTORIES, WAREHOUSES, GARAGES, LOADING DOCKS, PROCESSING LINES OR ANY OTHER HOT, INACCESSIBLE AREAS WHERE PEOPLE MUST WORK.

THE COOLAIR MOBILE AIR CIRCULATOR CAN BE ROLLED TO WHEREVER IT IS NEEDED ON FOUR HEAVY DUTY CASTERS.

FAN MODEL	BLADE DIAMETER	CFM	DIMENSIONS
MCF36J	36"	11,000	H 50" W 44½" D 21¼"

MCF36J Fan, 11,000 CFM, 472 RPM, ½ HP, 120V, 8 Amps, 1 Phase, 60 Hertz, Teao Motor. All galvanized steel fan with heavy duty six wing blade assembly for quiet efficient operation. Heavy gauge galvanized steel housing. ½" x 1" mesh 16 gauge wire guard PVC coated front and back that conforms to OSHA guarding requirements. 9'-3" wired cord with UL recognized on/off switch. Sturdy handle for moving the Coolair Mobile Air Circulator wherever needed.

OPERATION AND MAINTENANCE

Proper fan maintenance is essential for efficient, trouble-free service. It is recommended that periodic cleaning of the entire unit be performed. Keep the motor and blade clean for efficient operation. Instructions for proper lubrication of the fan motor are shown on the motor.

LIMITED WARRANTY

In the sale of its products American Coolair Corporation agrees to correct by repairs or replacement any defects in workmanship or material which may develop under proper or normal use during the period of one year from date of shipment from factory. Any product or part proving upon American Coolair's examination to be defective during limited warranty period will be replaced or repaired, at American Coolair's option, f.o.b. factory, without charge. Deterioration or wear caused by chemicals, abrasive action or excessive heat shall not constitute defects. Motors are guaranteed only to the extent of manufacturer's warranty. American Coolair's limited warranty does not apply to any of its products or parts that have been subject to accidental damage, misuse by the user, unauthorized alterations, improper installation or electrical wiring, or lack of proper lubrication or other service requirements established by American Coolair. Repairs constitute fulfillment of all American Coolair's obligations with respect to limited warranty. THE LIMITED WARRANTY STATED HEREIN IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS, STATUTORY OR IMPLIED, INCLUDING WITHOUT LIMITATION THAT OF MERCHANTABILITY AND FITNESS. No liability for reinstallation cost or for any special, indirect or consequential damages of any nature is assumed or shall be imposed upon American Coolair.

FARM PRODUCTS DIVISION



American Coolair Corporation
Phone (904) 389-3646
Box 2300, Jacksonville, Florida 32203
Fax 904-387-3449 E-mail: fans@coolair.com
Form no. 910-15-3 (August 1998) Printed in U.S.A.

WARNING



DO NOT INSTALL FAN WITH MOVING PARTS WITHIN 8 FEET OF FLOOR OR GRADE LEVEL WITHOUT A GUARD THAT COMPLIES WITH OSHA REGULATIONS. **DO NOT** USE UNLESS ELECTRICAL WIRING COMPLIES WITH ALL APPLICABLE CODES. **DO NOT** WIRE WITHOUT PROVIDING FOR A POWER SOURCE DISCONNECT AT THE FAN ITSELF. **DO NOT** SERVICE EXCEPT BY A QUALIFIED MAINTENANCE TECHNICIAN AND ONLY AFTER DISCONNECTING THE POWER SOURCE. FAILURE TO OBSERVE THESE PRECAUTIONS CAN RESULT IN SERIOUS INJURY OR DEATH.

CAUTION

WARNING: If these ventilation products are used in agricultural structures to support life where failure of the ventilation could result in loss or injury, the user must provide an adequate backup ventilation system and a failure alarm system. The user must accept the risk of such loss or injury from failure of the ventilation system.