

Packer Brother's Battery Display Board settings

To set the battery display

1. Press and hold the Set button till you see 1- -
 - a. Press the power button once and 1- - F should appear (this sets the battery type)
 - b. Pressing the set button will scroll up and down through the battery types
 - c. Press the power button and 1- - F 03 should appear
 - d. Press and hold the set button to save changes and return to home screen
2. Press and hold the Set button till you see 1- -
 - a. Press the set button to scroll to 2- -
 - b. Press the power button and 60 OFF will appear(this setting means that in 60 seconds the display will NOT time out)
 - c. To change times or on/off toggle right to left with the power button and up or down with the set button
 - d. Press and hold the set button to save changes and return to home screen
3. Press and hold the set button till you see 1- -
 - a. Press the set button to scroll to 3- --
 - b. Press the power button and 55.00 710 should appear (These are our voltage parameters)
 - c. To change parameters toggle right to left with the power button and up or down with the set button
 - d. Press and hold the set button to save and return to main menu
4. Press and hold the set button till you see 1- -
 - a. Press the set button scroll till you see 4- -
 - b. Press the power button and you should see a battery meter with 52 ON over top of it
 - c. This is for the low battery alarm to change the parameters us the power button to toggle right and left and the set button up and down
 - d. Press and hold to save changes and return to main screen
5. Press and hold the set button till you see 1- -
 - a. Press the scroll button till you see 6- -
 - b. This setting should be set to ON
 - c. Press and hold the set button to save changes and return to main menu
6. Press and hold the set button till you see1- -
 - a. Press the set button till you see 7- -
 - b. Press the power button and a battery meter should appear with a 48 off over top of it
 - c. This is the high voltage alarm
 - d. To change these setting scroll right to left with power button and up and down with set button
 - e. Press and hold the set button to save changes and return to main menu

What should appear in Letter B is what it should be. If this is not what you see follow the instruction to make it match and save.