




Click Here To View
Item at

www.GapPower.com

*Sales • Rentals
Parts & Service*

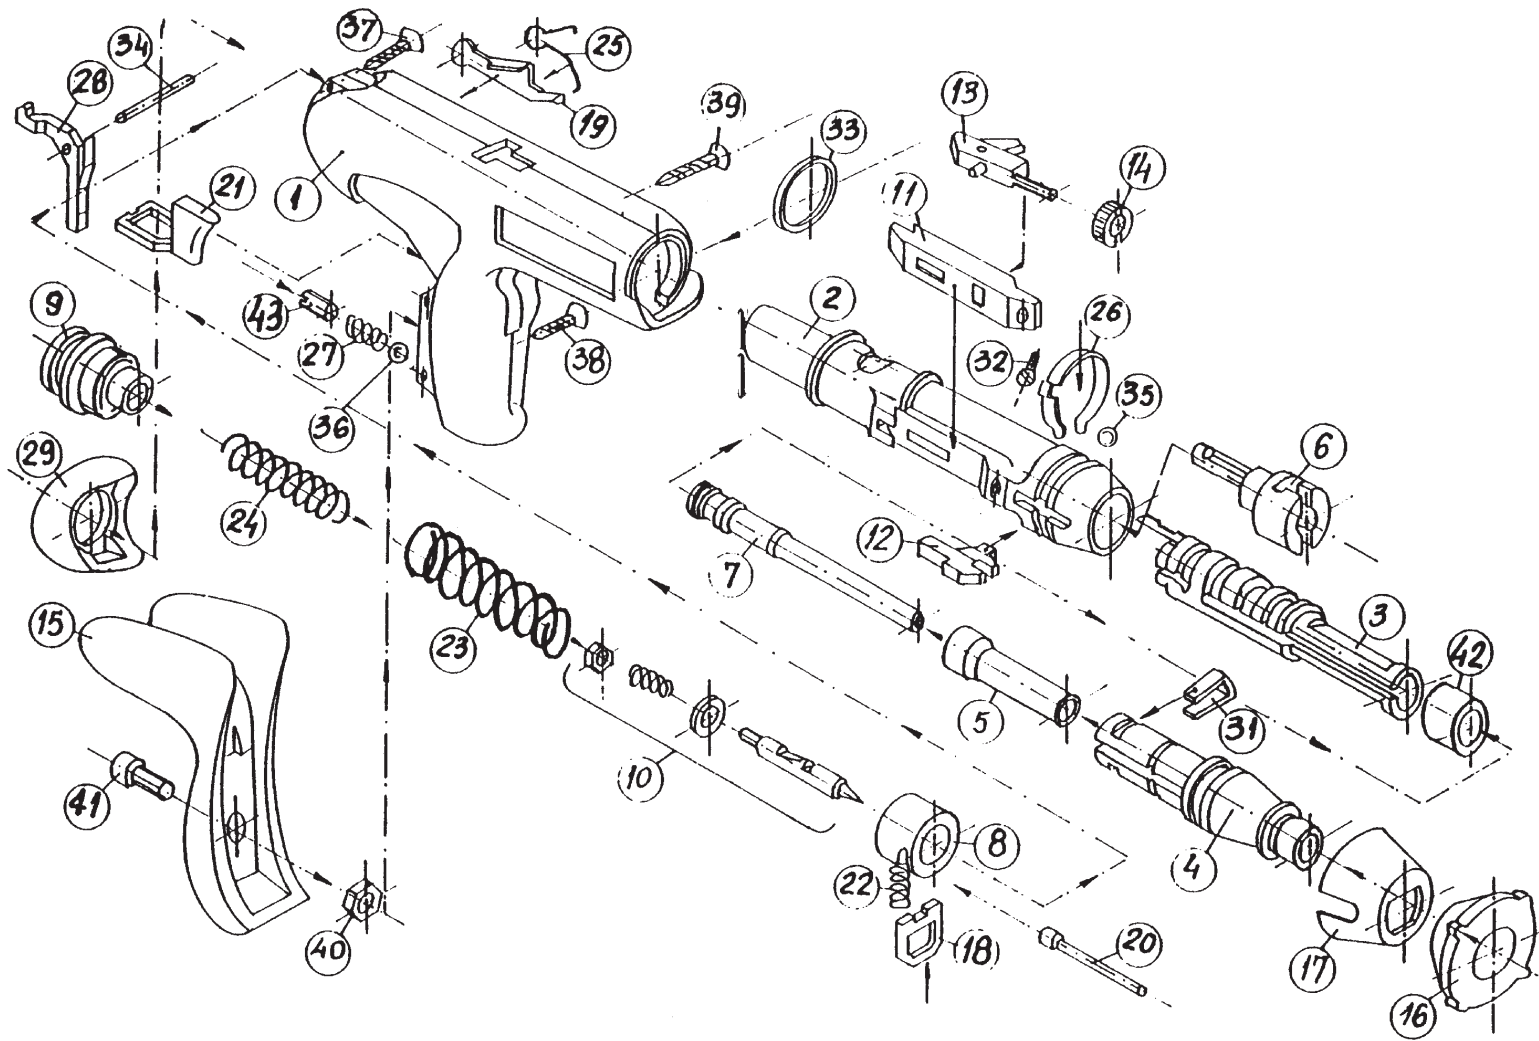

PARTS LIST OF PTP-27

1. Handle	PTP-611001	12. Piston Stop	PTP-514012	23. Mech. Spring	PTP-514027	34. Trigger Lever Pin	PTP-M85027
2. Receiver	PTP-612002	13. Regulator Bolt	PTP-514013	24. Firing Pin spring	PTP-514029	35. Ball Bearing, 7mm	PTP-M82177
3. Barrel	PTP-613003	14. Regulator Nut	PTP-514014	25. Advance Lever Spring	PTP-514030	36. Ball Bearing, 8mm	PTP-M82178
4. Baseplate	PTP-513004	15. Rubber Handle	PTP-614017	26. Annular Spring	PTP-514031	37. Screw 3 X 16mm	PTP-PNM83104
5. Nose Piece	PTP-513005	16. Spall Shield	PT-SG03421478	27. Strip Ball Spring	PTP-514033	38. Screw 3 X 22mm	PTP-PNM83105
7. Piston	PTP-513007	17. Rubber cover	PTP-514019	28. Trigger Sear Lever	PTP-514034	39. Screw 3X35mm	PTP-PNM83106
8. Firing Pin Mech.	PTP-514008	18. Sear	PTP-514020	29. Plug Cover	PTP-614004	40. Nut M6	PTP-M82154
9. Receiver Plug	PTP-514009	19. Advance Lever	PTP-514021	30. Shear Clip	PTP-514038	41. Bolt M6X15	PTP-M82302
10. Firing Pin Assembly	PTP-514010	20. Cocking Pin	PTP-514022	31. Cover Bolt M6X10	PTP-514041	42. Piston Ring	PTP-514032
11. Regulator Cover	PTP-514011	21. Trigger	PTP-514023	32. Connecting Ring	PTP-514045	43. Sleeve	PTP-M82179
		22. Sear Spring	PTP-514026				