




Click Here To View
Item at

www.GapPower.com

*Sales • Rentals
Parts & Service*




Signal will stop or substantially weaken when passing the break.

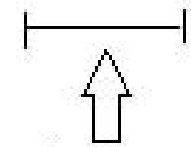

As you near the break, the null zone will disappear and you will get a solid noise.

Swing back and forth over the wire. As the receiver passes over the wire it will get quiet (null zone)

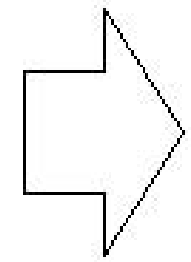

******CRITICAL******
Black wire must be properly grounded with a ground stake or electrical ground

Clamp Red Lead Here



HOUSE